


BYRNE


INSTALLATION INSTRUCTIONS 6' NEOPRENE CABLE SLEEVE (VELCRO AND ZIPPER)



1) Bundle loose cables inside of open Cable Sleeve

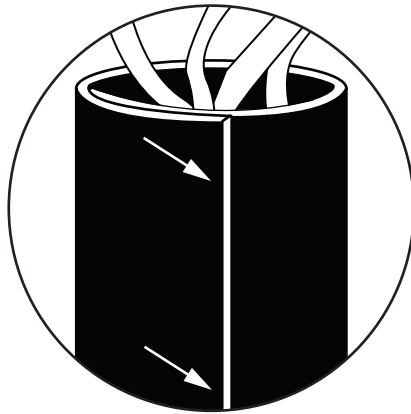


2) Close Cable Sleeve by firmly pressing together opposite sides so that the Velcro stays attached

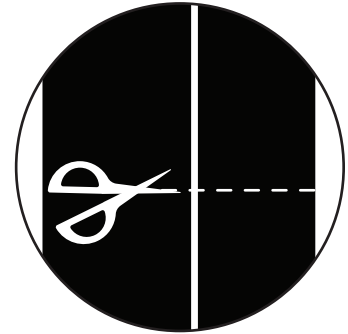

Velcro Cable Sleeves can be trimmed to length as needed



1) Bundle loose cables inside of open Cable Sleeve

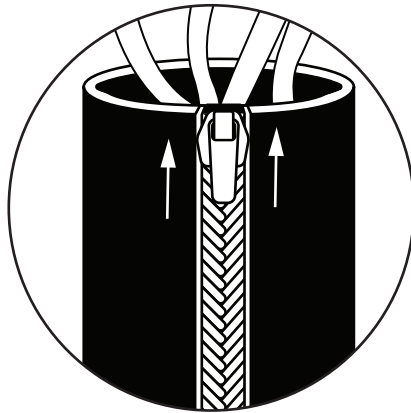

2) Close Cable Sleeve by connecting Zipper ends and zipping up from the bottom to the top end



Both Cable Sleeves can be easily cut into for additional cable routing anywhere along the sleeve