

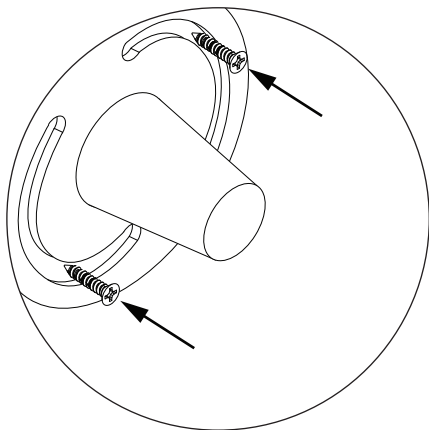


BYRNE™

INSTALLATION INSTRUCTIONS OVAL CABLE MANAGEMENT VERTEBRAE

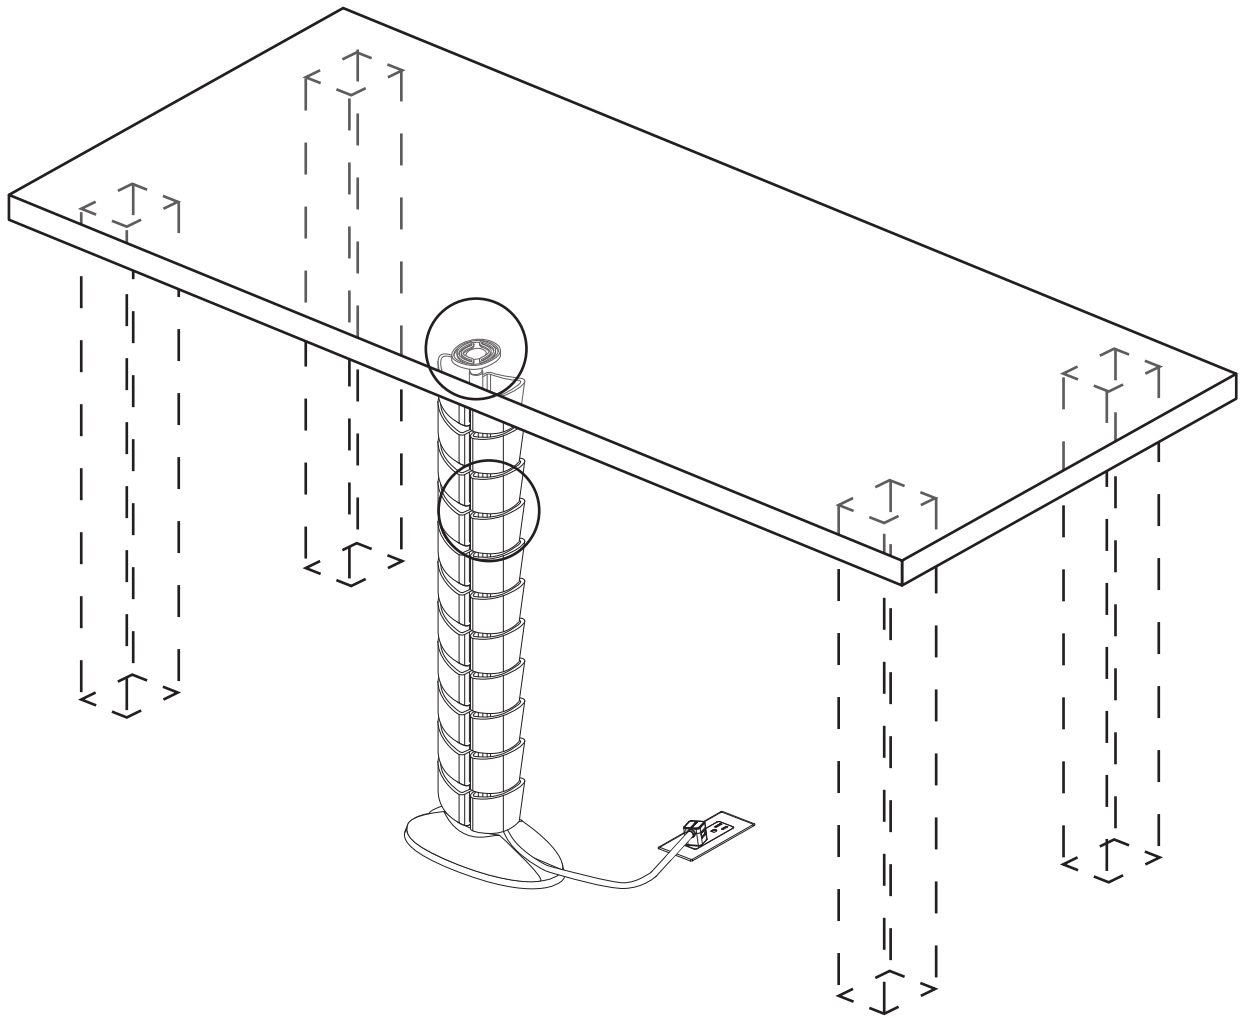

Attach top bracket to the bottom of the table with the two supplied screws

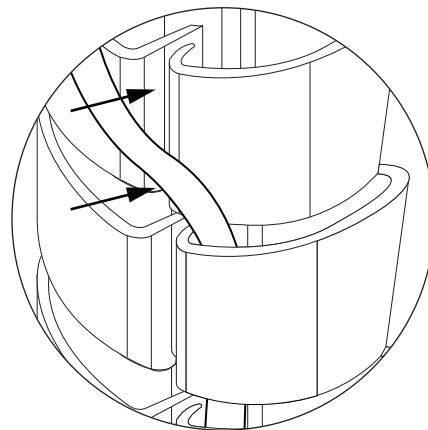

Press Cords into Vertebrae slots as needed