BYRNE

INSTALLATION INSTRUCTIONS FOR BUTTON™ W/ POWER

Cut a hole in the table to the specified dimensions.

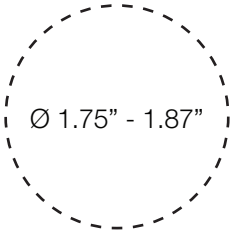

Feed the unit and the cord/conduit into the hole.

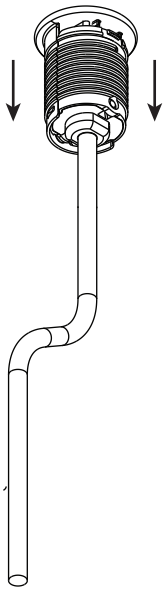

Screw on the grommet nut until the unit is secured.

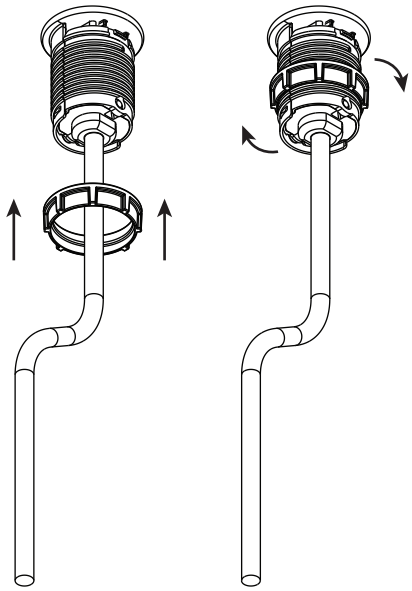

IS011272 © 2026 Byrne Electrical Specialists, Inc. All Rights Reserved

BYRNE

INSTALLATION INSTRUCTIONS FOR BUTTON™ W/ USB-A+C

Cut a hole in the table to the specified dimensions.

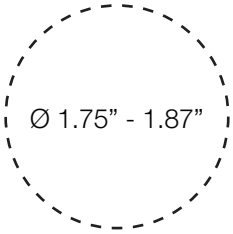

Feed the top of the unit up through the hole.

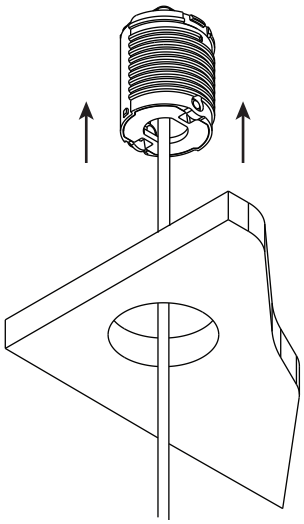

On a protected surface, attach the faceplate to the rest of the unit.

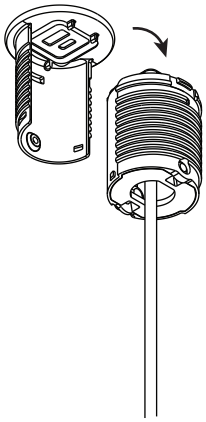

Insert the unit into the hole.

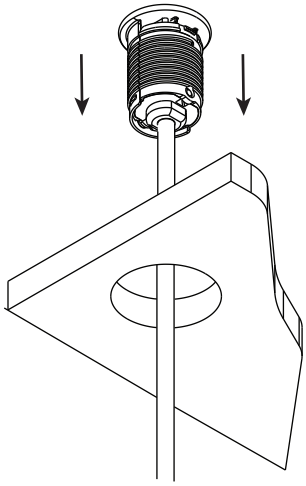

Screw on the grommet nut until the unit is secured.

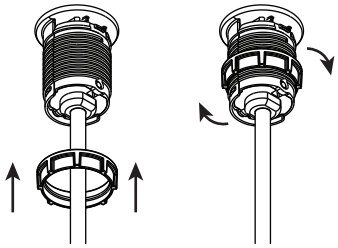

IS011272 © 2026 Byrne Electrical Specialists, Inc. All Rights Reserved

BYRNE

INSTALLATION INSTRUCTIONS FOR BUTTON™ W/ USB-C

Cut a hole in the table to the specified dimensions.

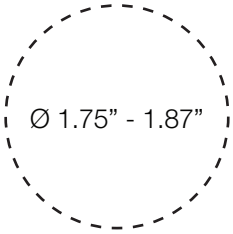

Unplug the cable from the wall wart.

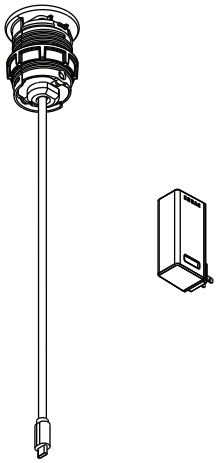

Feed the unit and the cord through the hole.

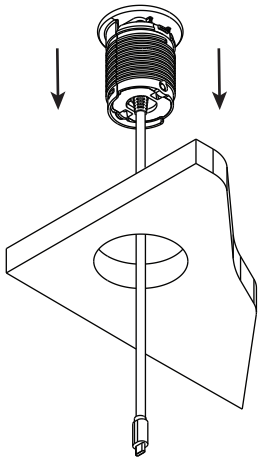

Screw on the grommet nut until the unit is secured.

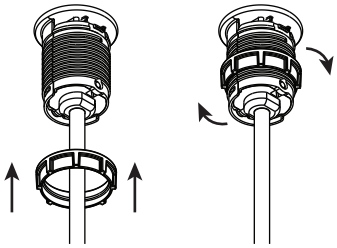

Plug in the cord to the wall wart.



IS011272 © 2026 Byrne Electrical Specialists, Inc. All Rights Reserved